

THE NEVERLEAK COMPANY, LP

www.neverleakcompany.com

Installation of Master Flash[®] Retrofit

EPDM

Master Flash is a registered trademark of Aztec Washer.

We stock grey retrofit only.




SELECT and TRIM...
Choose appropriate Retro Fit.
If necessary trim opening to
pipe diameter.



WRAP...
Wrap Retro-Fit around pipe
and install all snap rivets to
seal flange.




FORM...
Press Master Flash down, bending
it to conform to roof profile or
roof irregularities. A blunt tool
will help press flashing into tight
roof angles.

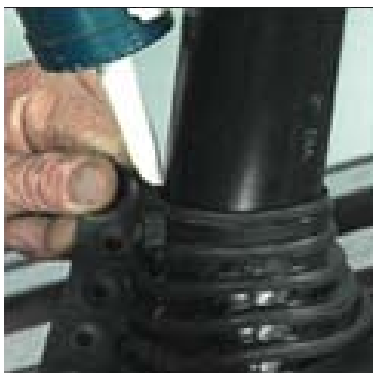

SEAL...
Apply sealant between base
and roof.



FASTEN...
Use fasteners to complete
sealing. For UPC installation,
fastener spacing may not
exceed 1-1/2" (38mm).

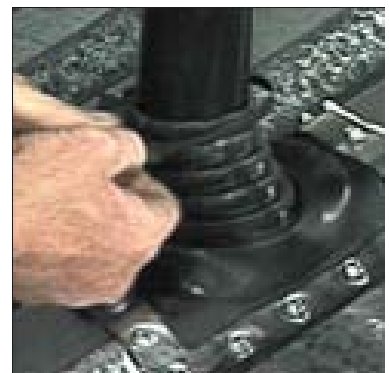

INSTALL CABLE TIE...
Install supplied cable tie at
uppermost part of Retro-Fit
and apply sealant to any gaps.